


LH-Jetronic II fuel injection

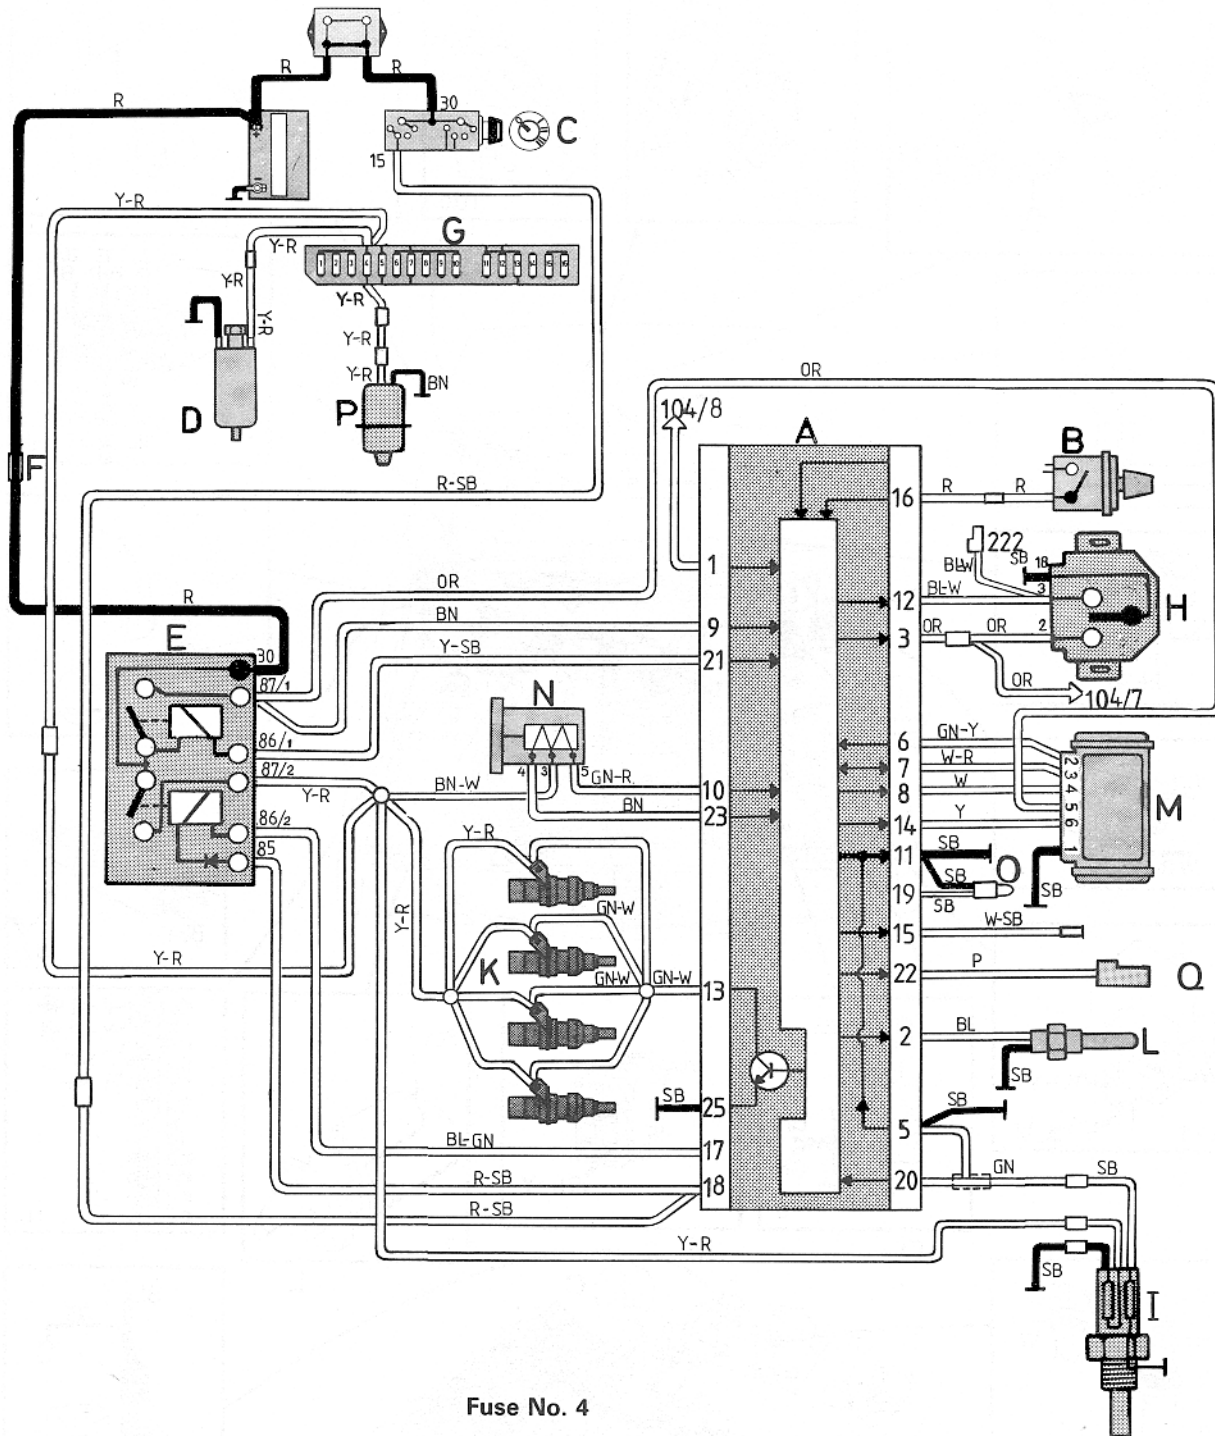

Fuse No. 4

No other functions

138182-V

- | | | | |
|---|-----------------|-----|-------------------------------|
| A | Control unit | K | Injectors |
| B | Microswitch, AC | L | Ambient temp sensor |
| C | Ignition switch | M | Air mass meter |
| D | Fuel pump | N | Idling valve |
| E | Main relay | O | Connector |
| F | Fuel pump relay | P | Tank pump |
| G | Fusebox | Q | Test point, Lambdasond |
| H | Breaker | 104 | Ignition system, control unit |
| I | Lambdasond | 222 | Idle speed adjustment |

LH-Jetronic II fuel injection

